Maintenance Timetable of Diesel Generating Set

* For Refer	Maintenance	Content	Everyday	Every	Every	Every	Every year
System	job			week	month	six months	or 250 hrs
Lubricating system	Check	Oil leakage	√ -	√	√	√	√
		Level of engine oil	√	√	√	√	√
		Oil Pressure	√				
	Replace	Filter of engine oil				√	√
		Engine oil				√	√
	Clean	Crankcase box		-		√	√
Cooling system	Check	Cooling fluid leakage	√	√	√	√	√
		Cooling Water Temperature	√				
		Radiator block			,√	√	√
		Soft tube & Joint			√	√	√
		Quantity of cooling fluid	√	√	√	√	√
		Antifreeze & anticorrosion			√		√
		Fan Status	√				
		Belt status	√		1	√	√
	Add grease Iubricant	Fan and tensive				√	√
		Belt wheel				*	~
	Check	Driving belt wheel and pump				√	√
	Replace	Cooling liquid	F				
	Clean	Cooling system	Every 12 months				
Air Inflow system	Check	Oil gas			√	√	4
		Resistance of air cleaner		√	√	4	4
		Pipe fittings & joint				1	√
	Replace	Core of air cleaner					√
Fuel System	Check	Fuel Leakage	√	√	√	√	√
		Quantity of fuel	√	√	. √	. 1	√
		Pump nozzle					√
		Fuel pipe and joint				√	√
		Oil pump			√	√	√
	Discharge	Deposition of fuel tank			√	√	√
	Replace	Fitter of diesel oil				√	- √
	Check	Nozzle	Every two years				
	Adjust	Arm & value	According Engine Maintenance Manual				
Exhaust System	Check	Air leakage	* .		√	√	√
		Abnormal Smoke	√				
		Resistance of exhaust			√	√	√
Electrical system Engine & other parts system	Check	Charging generator's belt status			√	√	√
		Protection switch and alarm system		√	√	<i>√</i>	√
		Bolt and joint of starting motor		,	,	,	
		Abnormal vibrating	 	<i>√</i>	√	√	√ √
		Abnormal Noise	7	•	,	,	•
		fastening level with frame	'				√
	Clean						√
	Clean	Engine					~